






# LOCK PLUG INSTRUCTION MANUAL





### A: How to install Lock-Plug

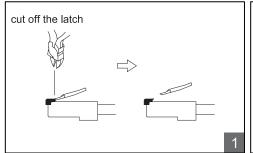

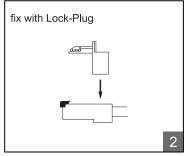


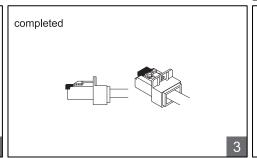

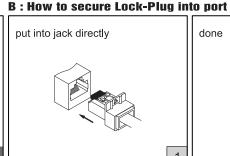


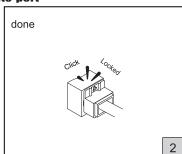


## C: How to release Lock-Plug

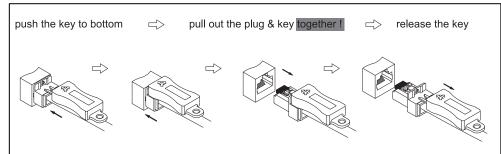


# D: How to exchange Lock-Plug & Plug-SOS

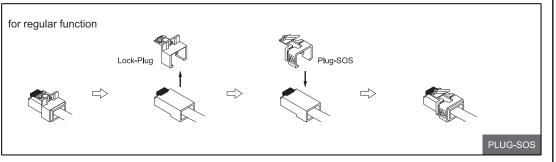


### **⚠ WARNING**

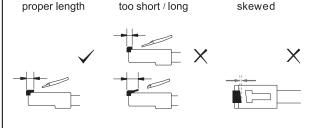

 
always check for proper fixing of the latch or it can cause jam in the jack!



 always to remove the key from Lock Plug to avoid clip part elastic fatigue




if high density jack does not clip, use thumb to push black area to lock

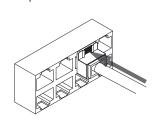

if clip part elastic fatigue, bend the clip outward



 may not be suitable for some top opened, too high, or special jacks



trim away any part of boot or Lock Plug to get the best matching













