


INSTALLATION INSTRUCTION

1. UTP

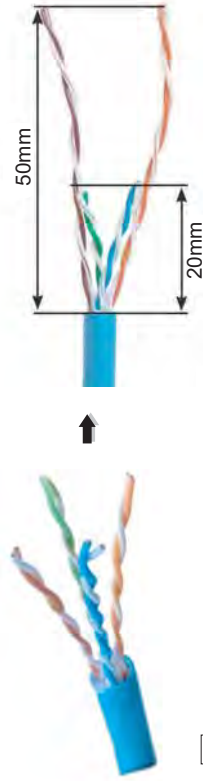

A	B	A	B
1	2	8	7
4	5	6	3

For T568B wiring, cut pair GREEN and BLUE 20mm
For T568A wiring, cut pair ORANGE and BLUE 20mm

UTP

2.



3.



4.




1.

5.



6.

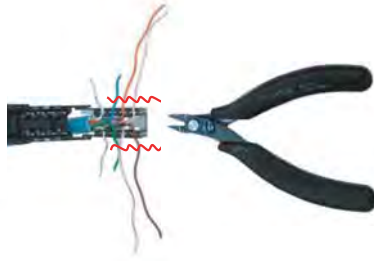

7.



Pliers recommended to assist crimping



Tools:




IN CASE YOU WANT TO RELEASE THE WIRING INSERT
YOU CAN USE THE SCREW DRIVER TO RELEASE IT

2.

UTP

INSTALLATION INSTRUCTION

1. STP/FTP

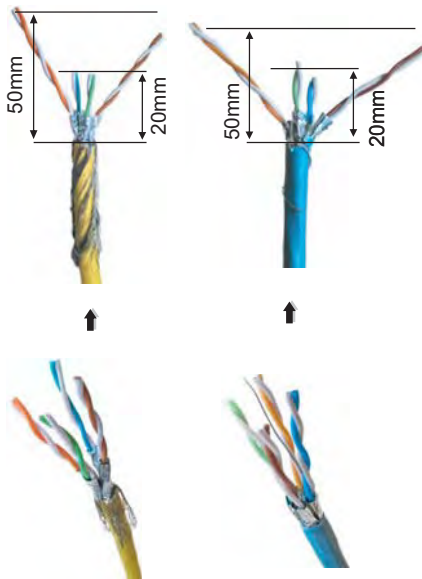

A	B	8	7
1	2	6	3
4	5		

For T568B wiring, cut pair GREEN and BLUE 20mm
For T568A wiring, cut pair ORANGE and BLUE 20mm


2.



3.



4.

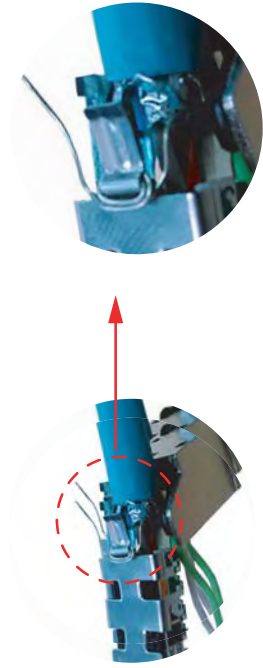

STP/FTP

3.

STP/FTP


4.



5.



6.

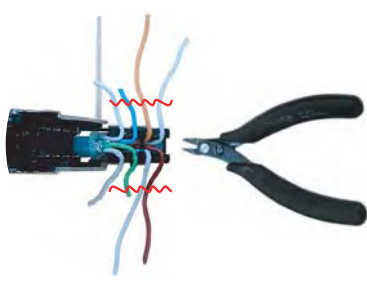

7.



8.



Pliers recommended to assist crimping



QR code for the video